Before you start:

- Confirm that the application room or space is ready for the SmartFresh technology application. Refer to the list of steps.
- Do you have the necessary components to make the treatment?
- REMEMBER: Each kit can activate a maximum of 10 SmartFresh SmartTabs.



AgroFresh 400 Arcola Road PO Box 7000 Collegeville, PA 19426

AgroFresh Customer Service: 1-866-206-1001

AgroFresh Online Order Services: 1-877-527-3135



USE INSTRUCTIONS FOR:







Сгор	Number of SmartFresh SmartTabs to use
Apple, Asian Pear, Avocado, Broccoli	One SmartFresh SmartTab per 120 cubic feet
Pear	One SmartFresh SmartTab per 200 cubic feet
Melon, Tomato, Kiwifruit, Persimmon, Plum, Apricot, Peach, Nectarine	One SmartFresh SmartTab per 240 cubic feet
Banana	One SmartFresh SmartTab per 380 cubic feet



© 2015 AgroFresh. All rights reserved. SMARTFRESH and SMARTTABS are trademarks of AgroFresh.







SmartFresh™ SmartTabs™


WITH ACTIVATOR KIT AND ACTIVATOR SOLUTION

- **1.** Ensure that you have the correct number of SmartFresh SmartTabs for the treatment.
- **2.** Fill the space or room where the application will be made with the fruits or vegetables to be treated.
- **3.** Open the SmartFresh Activator Kit. Leave the container with the Activator Solution inside the foam block.

Remove the cap from the container.



Confirm that the container has a small hole to allow SmartFresh technology to be released into the treatment space.

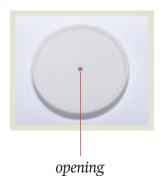

4. Place the TWO BLUE ACTIVATOR TABLETS in the inverted container cap.





5. Add the correct number of SmartFresh SmartTabs (as per the label requirement) into the inverted container cap.





6. Peel open the foil seal on the Activator Solution container.



IMPORTANT: Before adding the tablets to the liquid, make sure you are ready to complete steps 7, 8 and 9 quickly, as the product will start to release in 5 minutes.

7. Place all the tablets into the container with the Activator Solution.



Place the cap back on the container.



8. Place the foam block with the container on a stable, level surface inside the space to be treated.



9. Close the treatment room doors tightly and ensure that they remain closed during the entire treatment period.

DO NOT OPEN THE DOORS BEFORE THE APPLICATION HAS FINISHED.